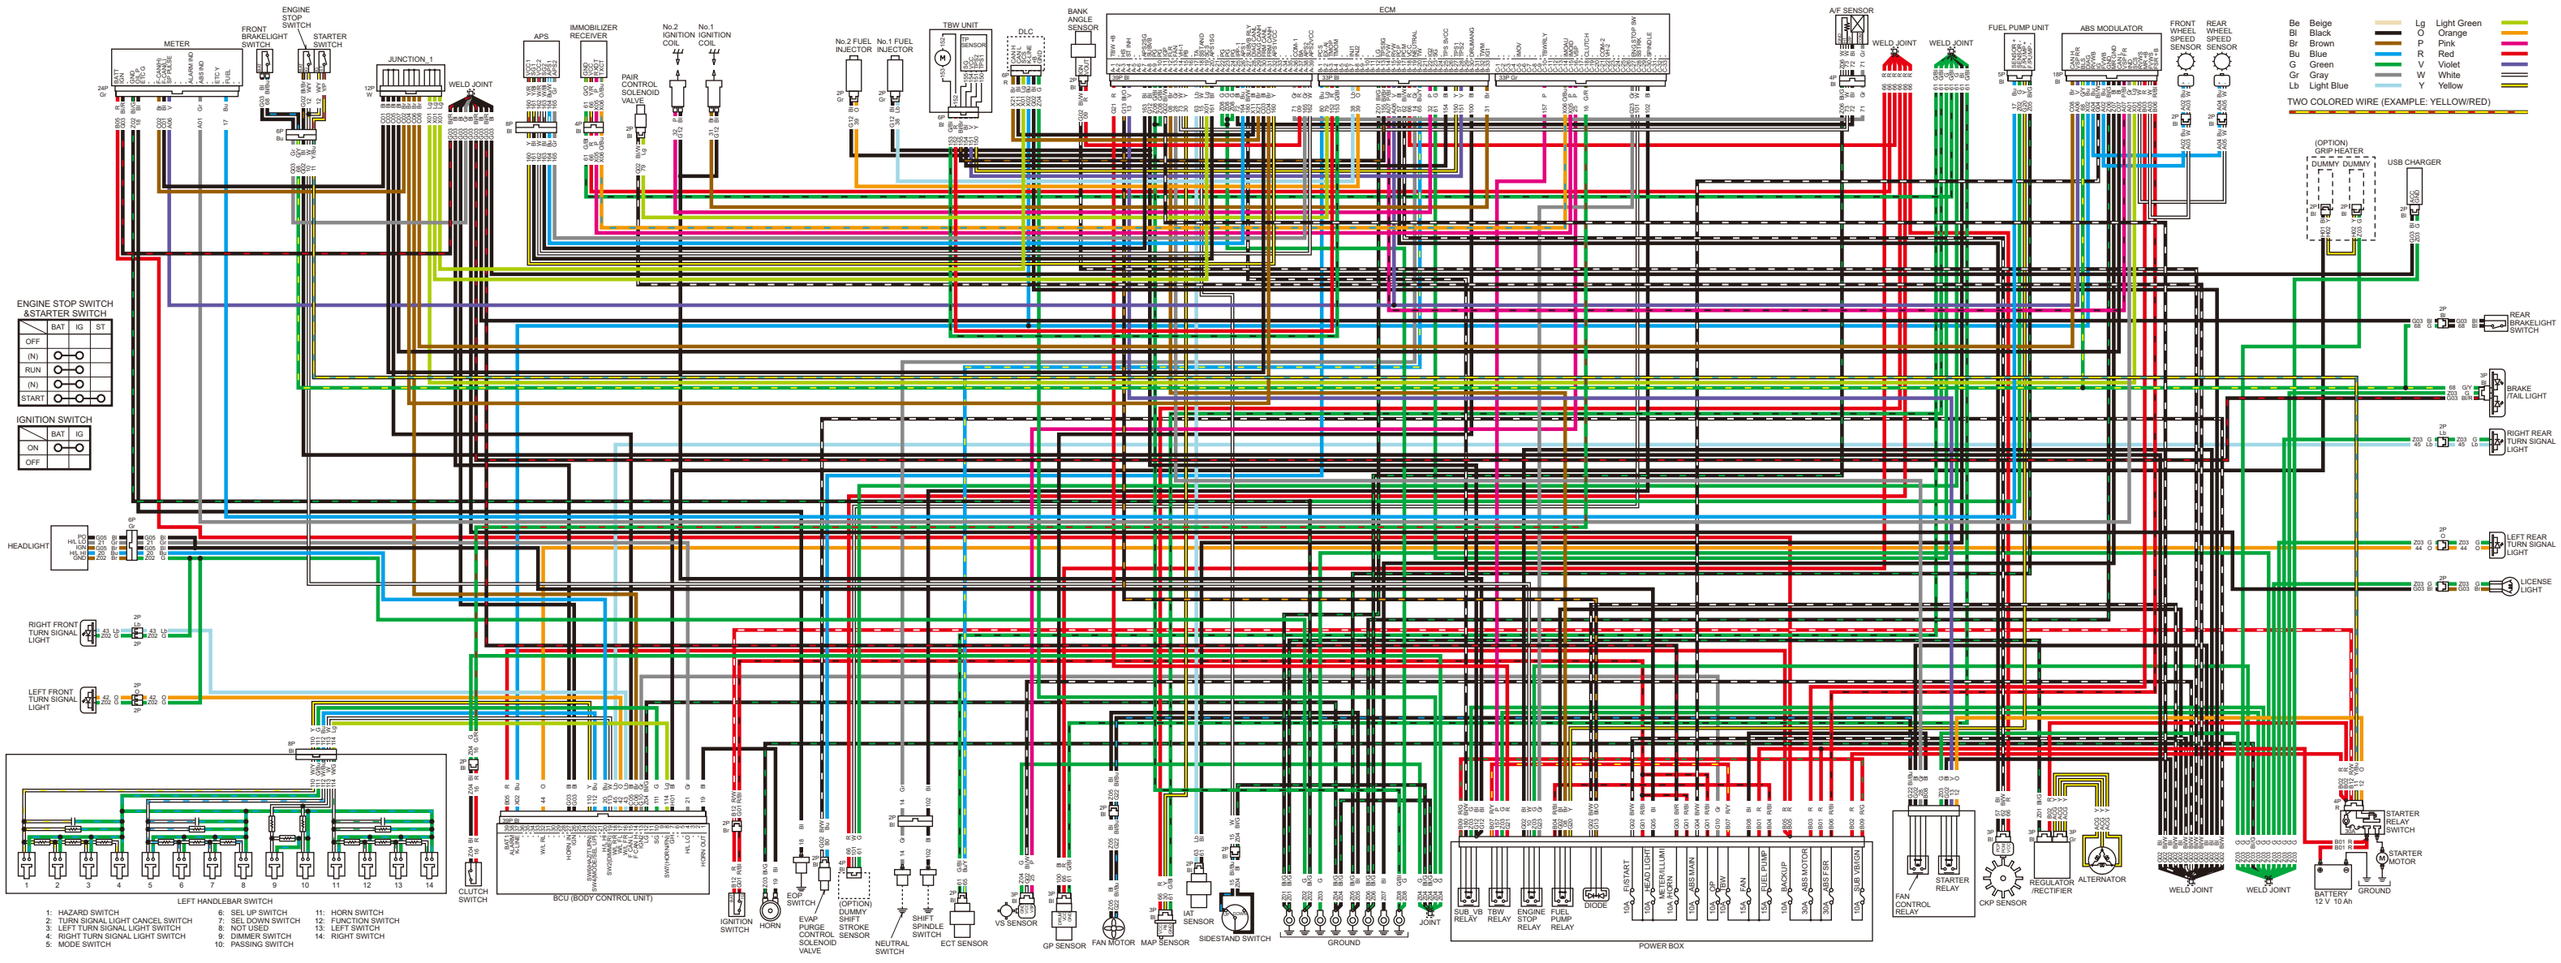
METER
FRONT BRAKELIGHT SWITCH
ENGINE STOP SWITCH
STARTER SWITCH
JUNCTION_1
WELD JOINT
APS
IMMOBILIZER RECEIVER
PAIR CONTROL SOLENOID VALVE
No.2 IGNITION COIL
No.1 IGNITION COIL
No.2 FUEL INJECTOR
No.1 FUEL INJECTOR
TBW UNIT
DLC
BANK ANGLE SENSOR
ECM
A/F SENSOR
WELD JOINT
WELD JOINT
FUEL PUMP UNIT
ABS MODULATOR
FRONT WHEEL SPEED SENSOR
REAR WHEEL SPEED SENSOR
Be Beige
Bl Black
Br Brown
Bu Blue
G Green
Gr Gray
Lb Light Blue
Lg Light Green
O Orange
P Pink
R Red
V Violet
W White
Y Yellow
TWO COLORED WIRE (EXAMPLE: YELLOW/RED)
(OPTION) GRIP HEATER
DUMMY
DUMMY
USB CHARGER
ENGINE STOP SWITCH &STARTER SWITCH
BAT IG ST
OFF
(N)
RUN
(N)
START
IGNITION SWITCH
BAT IG
ON
OFF
HEADLIGHT
HL HI
HL LO
HL RE
GND
RIGHT FRONT TURN SIGNAL LIGHT
LEFT FRONT TURN SIGNAL LIGHT
REAR BRAKELIGHT SWITCH
BRAKE TAIL LIGHT
RIGHT REAR TURN SIGNAL LIGHT
LEFT REAR TURN SIGNAL LIGHT
LICENSE LIGHT
STARTER RELAY SWITCH
STARTER MOTOR
BATTERY 12 V 10 Ah
GROUND
LEFT HANDLEBAR SWITCH
1 2 3 4 5 6 7 8 9 10 11 12 13 14
1: HAZARD SWITCH
2: TURN SIGNAL LIGHT CANCEL SWITCH
3: LEFT TURN SIGNAL LIGHT SWITCH
4: RIGHT TURN SIGNAL LIGHT SWITCH
5: MODE SWITCH
6: SEL UP SWITCH
7: SEL DOWN SWITCH
8: NOT USED
9: DIMMER SWITCH
10: PASSING SWITCH
11: HORN SWITCH
12: FUNCTION SWITCH
13: LEFT SWITCH
14: RIGHT SWITCH
CLUTCH SWITCH
BCU (BODY CONTROL UNIT)
IGNITION SWITCH
HORN
EVAP PURGE CONTROL SOLENOID VALVE
(OPTION) DUMMY SHIFT STROKE SENSOR
NEUTRAL SWITCH
SHIFT SPINDLE SWITCH
ECT SENSOR
VS SENSOR
GP SENSOR
FAN MOTOR
MAP SENSOR
IAT SENSOR
SIDESTAND SWITCH
GROUND
JOINT
SUB VS RELAY
TBW RELAY
ENGINE STOP RELAY
FUEL PUMP RELAY
DIODE
10A FI START
10A HEAD LIGHT
10A METER ILLUMI
10A IGN
10A ABS MAIN
10A ABS SOL
10A FUEL PUMP
10A BACKUP
30A ABS MOTOR
30A ABS FSR
10A SUB VB/IGN
POWER BOX
FAN CONTROL RELAY
STARTER RELAY
CKP SENSOR
REGULATOR /RECTIFIER
ALTERNATOR
WELD JOINT
WELD JOINT
GROUND